

Why is my Remote Control Not Responding?

Always consult the Installation and Operating Instructions manual that came with your remote before trying anything on your own. The manual has a troubleshooting section. The following is an excerpt from a trouble shooting section of an Ambient Technologies manual.

TROUBLESHOOTING		
Symptom	Causes	Action
1. LED light on receiver blinking or battery icon on LCD on transmitter.	1. Low Battery	1. Replace batteries. Change batteries every 6 months.
4. Appliance does not come on after pressing [ON] on transmitter	1. Wiring / Electrical Connections	1. Slide the switch to ON, if appliance comes ON, wiring is not the causes. 2. If appliance does not come on, check wiring connections.
	2. Privacy (DIP) switch setting on transmitter does not match receiver	1. Make sure the transmitter and receiver has the same DIP switch settings.
	3. Distance between the transmitter and receiver is more than 30 feet	1. Make sure the operating distance is less than 30 feet
5. Receiver cannot receive signal.	1. Receiver is installed in an enclosure	1. Make sure the receiver is not located inside an enclosure.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Always remember that there are batteries in the receiver as well as the transmitter.